ACOUSTICS


Tel. (818) 376.8490 (800) 987.3306

SCALE- AS NOTED DATE- 7-20-22

CEILING DETAIL

SHEET#



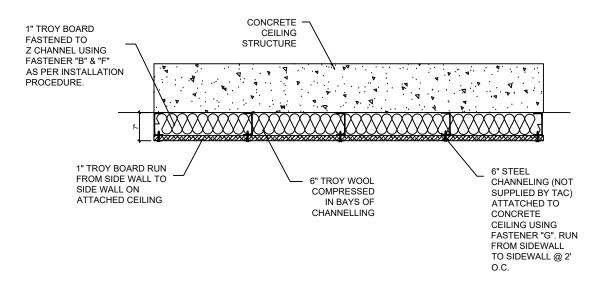

ATTACHED CEILING DETAIL

(SIDE VIEW)

A - 3 NTS

FASTENERS

1/4" X 2 " SELF TAPPING HEX HEAD SCREW USED TO FASTEN 1" BOARD TO CHANNEL

Direct Attatched Ceiling Install Procedure (With Z Channel

*If Wood Furring will be used in lieu of Steel Channel, fastener "D" must be used

Steel Channel to be secured to concrete ceiling structure using fastener

2. Once all Channeling has been attached, use a spray adhesive (3M-90 or equal) to secure 6" Troy Wool to underside of ceiling surface fitting tight in

place until the Troy Board material is attached. Use a 10" serrated knife to cut

the Troy Wool if cuts are required. Cover entire designated surface with Troy

between each channeling. The spray adhesive is to hold the Troy Wool in

3. Start layout of 1" Troy Board perpendicular to Channeling. Start at the

front of the ceiling with the 23 $\frac{5}{8}$ " side parallel to Channel. The board must sit flush against the Channel and the front side MUST BE LEVEL. Cover entire

4. Using the supplied fasteners "B" and "F", attach Troy Board to Channel every 3" from all edges and side. Field placement is at every furring element in a straight line. There are typically 10 fasteners per Troy Board. Troy Board is a finish acoustic material. Make sure joints are tight. Troy Board is to be installed without edges damaged. Troy Board may be cut using a circular saw, hand

saw, or reciprocating saw type. The Troy Board is manufactured with Portland

cement; thereby dust will be created when using a circular saw.

supplied by Troy Acoustics)

designated surface with Troy Board.

instead of fastener "B"

Wool.

 $\frac{1}{4}$ x 2" LAG SCREW USED TO FASTEN 1" BOARD TO WOOD FURRING

1" X 1 1" FENDER WASHER USED IN COORDINATION WITH FASTENER "B" TO FASTEN 1" BOARD TO CHANNEL



1" X 13" TAPCON USED TO FASTEN CHANNEL TO CONCRETE CEILING STRUCTURE

